


REMOTE CONTROL INSTRUCTIONS

The remote control works per infra-red, so it has to be placed IN FRONT of the Thermostat at a maximum distance of 2 meters.

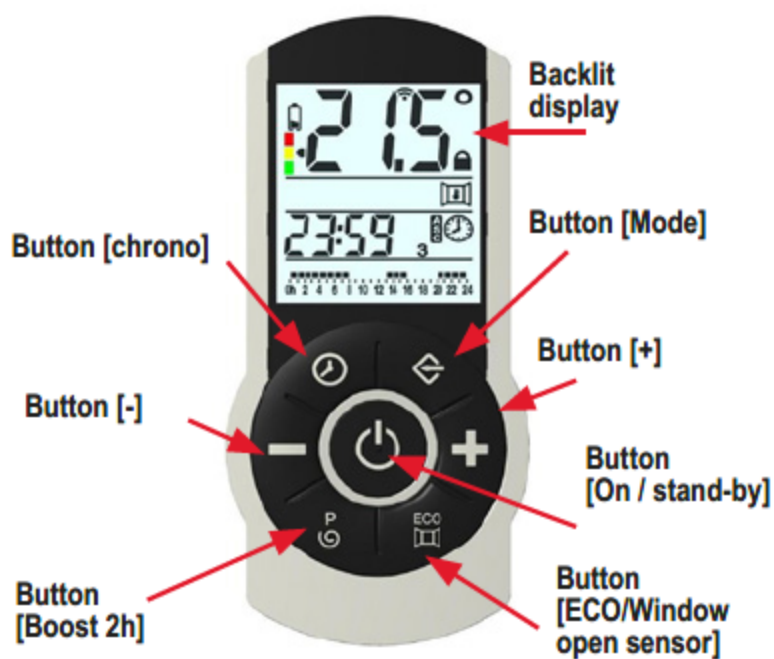

OPERATING MODES:

Chrono 	SET week / day / time
Comfort 	MAX. Temperature of the room, with button 
Night 	MIN. Temperature of the room, with button 
Anti-freeze 	Maintains the ambient temperature at 7°C, with button 
Eco 	Maintains the ambient temperature 3,5 °C below the "Comfort" Temperature
Window open sensor 	Press button ECO and button "-" together for 5 seconds = it recognizes if the window is open and automatic switches off for 30 min.
 Timer 2H 	Heating element switches on to reach 32° C, and stops automatically after 2 hours (or goes back to the set CHRONO temperature)

SET MAX. / MIN. TEMPERATURE

1 – Press button  until you see the SUN .

Using **+/-** set the max. room temperature . For example 26 °:




2 – Press button  until you see the MOON .

Using **+/-** set the min. room temperature. For example 18 ° :



SET WEEK / DAY / TIME

To start the setting, please proceed using the button CHRONO on the remote control:

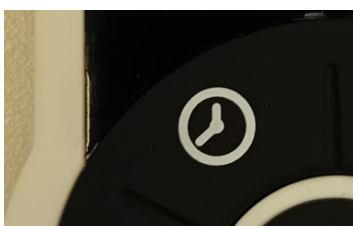

When you start the setting, the following programs are suggested in the order in which they are confirmed:

- YEAR → set with button +/- and confirm with 
- MONTH → set with button +/- and confirm with 
- DAY → set with button +/- and confirm with 
- TIME (Hour + Minutes) → set with button +/- and confirm with 

YEAR



MONTH



DAY



TIME



After the minutes are confirmed, Day 1 will be shown:
(1st day of the week → MONDAY)



SETTING THE WEEKLY OPERATING PROGRAM

This can be used to program the times at which the heating should work or not work.

Die Programmierung startet mit Tag 1 (MONTAG) - Drücken Sie die Taste **+/-** um die Stunden einzustellen:

Programming starts with day 1 (MONDAY) - Press the + /- button to set the hours:

- use the **+** button to select the hours during which heating is to take place ()
- Use the **-** button to select the hours during which heating should NOT be used ()

EXAMPLE: The Radiator heats from 4 am to 8 am and from 1 pm to 4 pm.



With button  you confirm DAY 1 and automatically move on to day 2 (TUESDAY).
And so on until day 7 (SUNDAY).