

ENG

Remote Control Instructions

 
REMOTE CONTROL INSTRUCTIONS

Installation Preparation

Remote control installation


Remote control holder installation 1:

1. Drill a 6 mm diameter hole in the wall to a depth of about 35 mm.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Install an anchor into the hole, stick the holder to the wall and secure with screws and then stick the patch with tape.

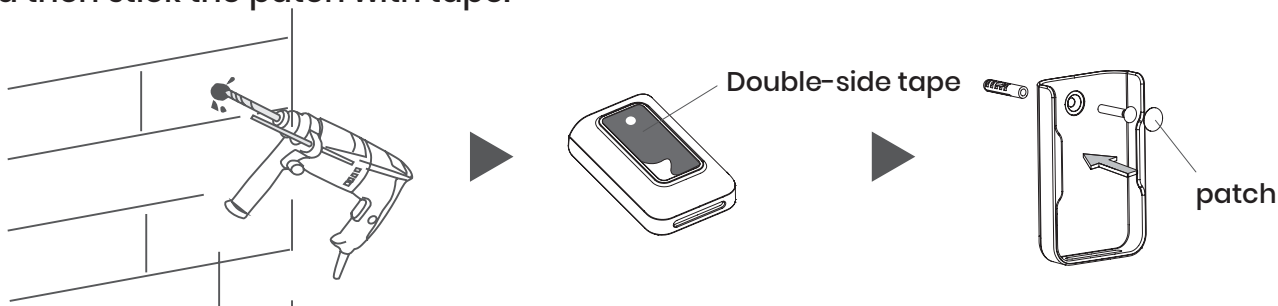


Remote control holder installation 2:

 1. Clean and dry the pre-installation area of the holder.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Stick the holder to the wall vertically and then stick the patch with tape.

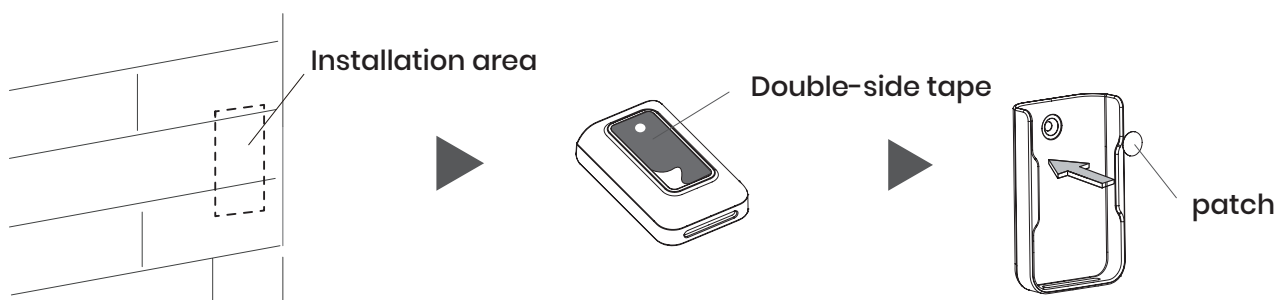

Battery installation:

 1. Plaats de batterijen in de afstandsbediening.
2. Plaats de afstandsbediening in de houder.

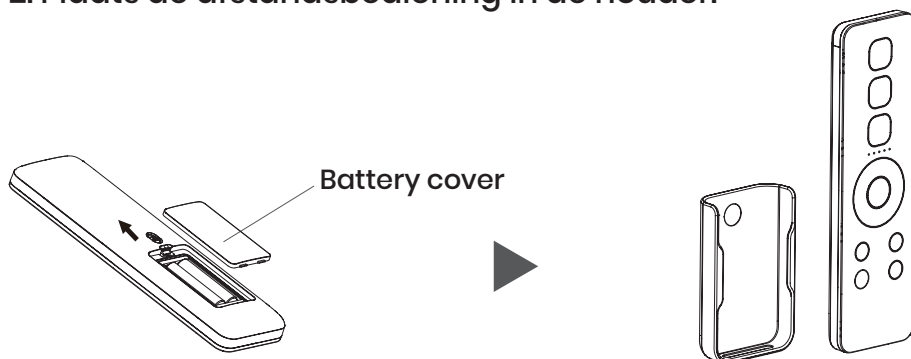


Notice:

1. Please ensure the remote control is within reach when a person on the seat.
2. Do not install and use the product in damp places such as a shower room.
3. Do not place the product in a place where it is easily exposed to water.

REMOTE CONTROL INSTRUCTIONS

Installation Preparation

 Remote control illustration:

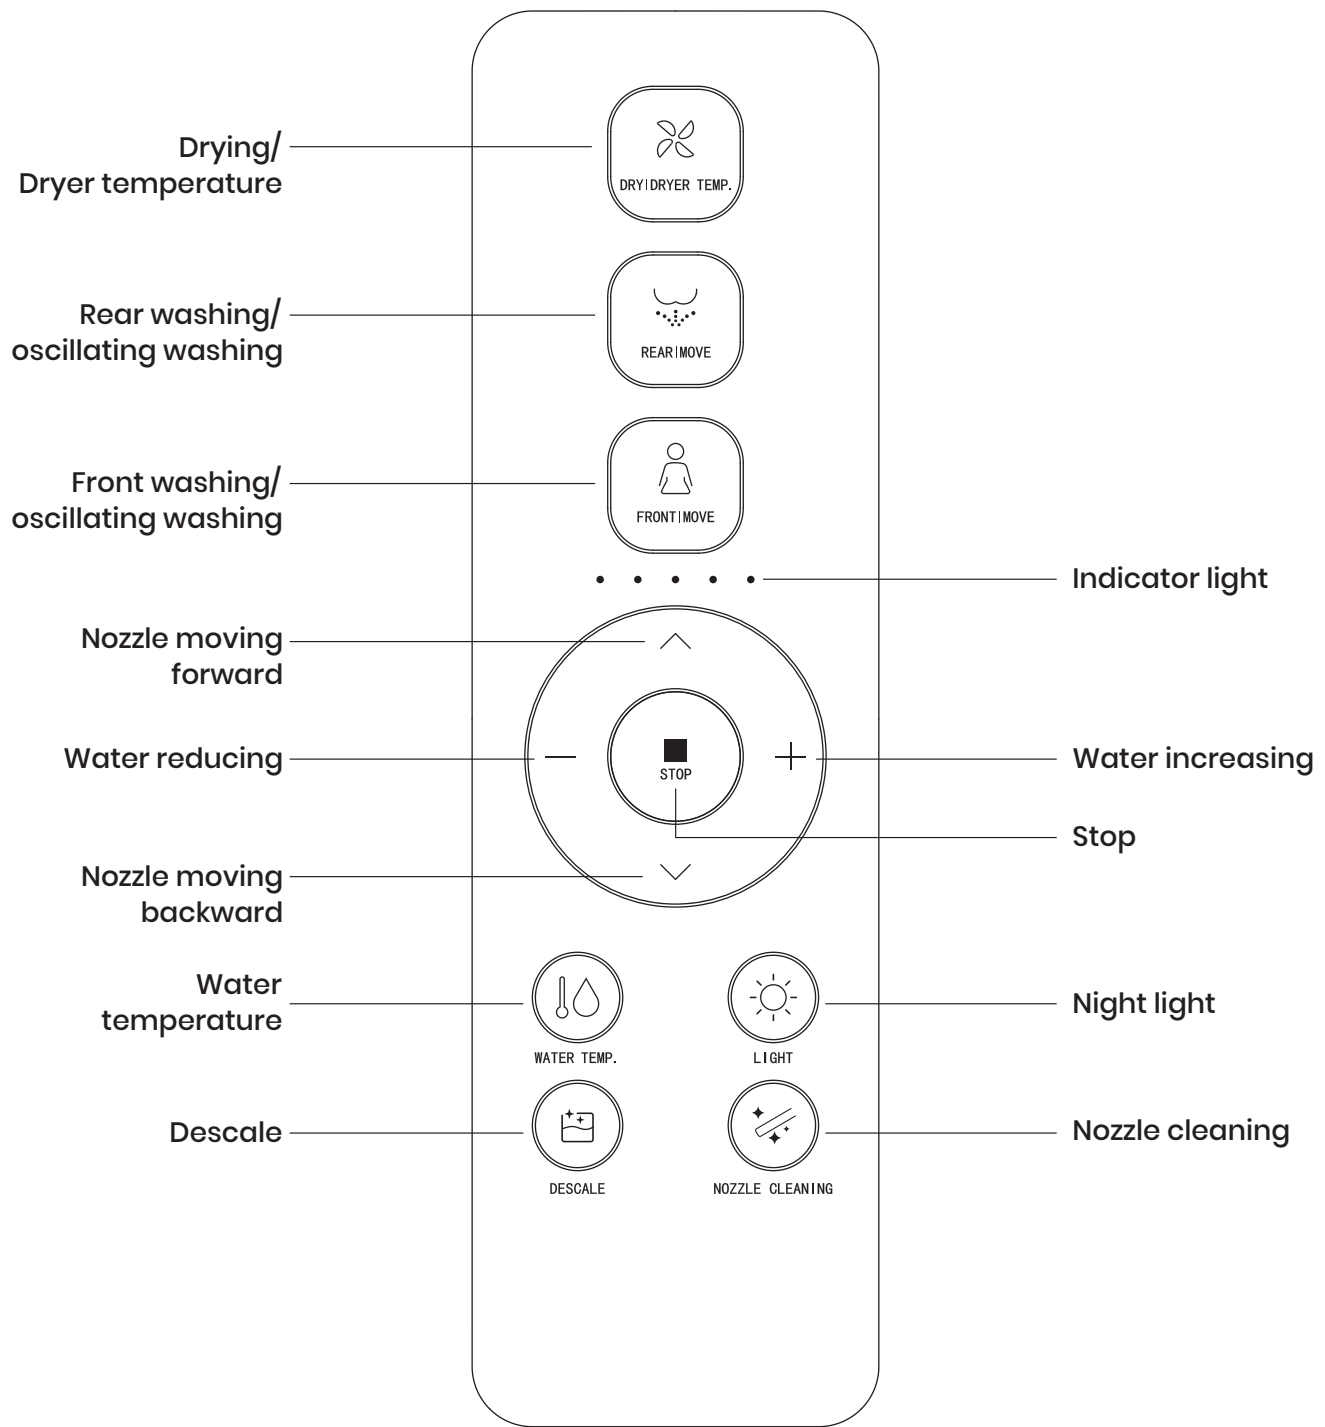

REMOTE CONTROL INSTRUCTIONS

Usage Instruction

Notice:

- Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.
- Please sit backward on the seat for correct washing position and to avoid splashing.
- The nozzle will continue to spray for 1-2 seconds after user stands up during washing, so please press “STOP” button before standing up.




Rear | Move

Press “” button, the indicator light is on showing current water temperature level, it starts rear washing; Press again “” button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses “” button.



Front | Move

 Press “” button, the indicator light is on showing current water temperature level, it starts front washing; Press again “” button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses “” button.

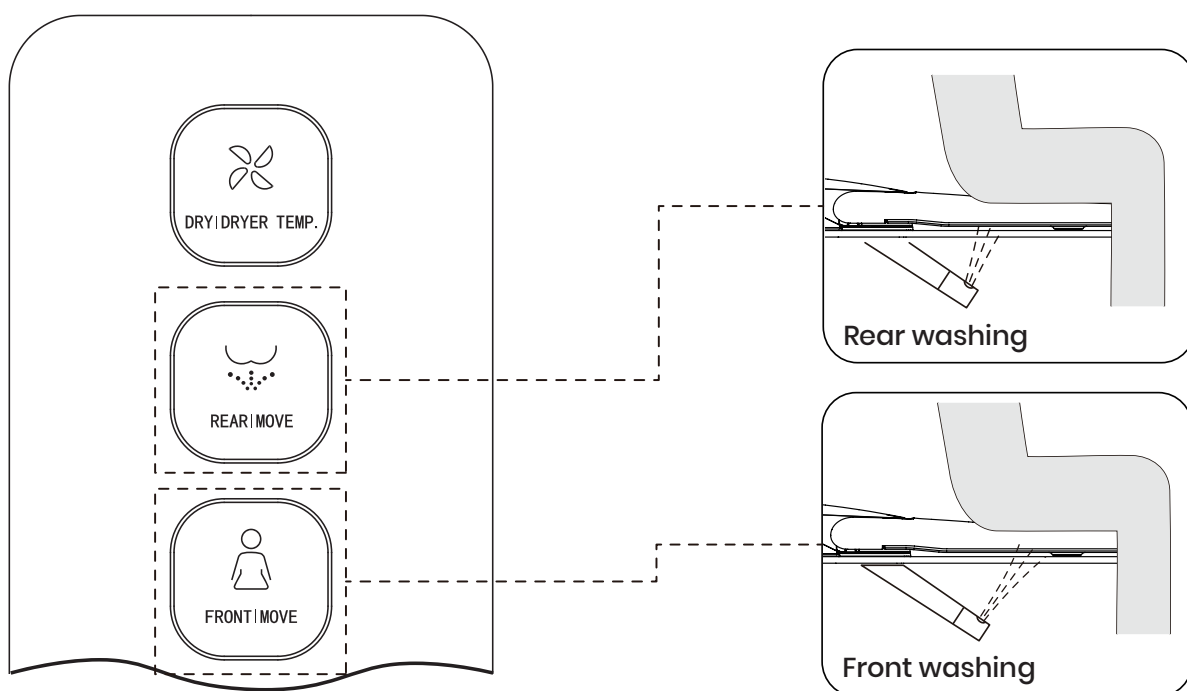


REMOTE CONTROL INSTRUCTIONS

Usage Instruction



Dry | Dryer Temp

 1. Under drying, press “” button to adjust the air temperature between 0-5 level, and the indicator light is on showing the air temperature level. When the indicator light is off, the temperature is at level 0 (room temperature).
2. Press “” button, the indicator is on, showing the current air temperature level. It will stop drying automatically after one cycle or after leaving.

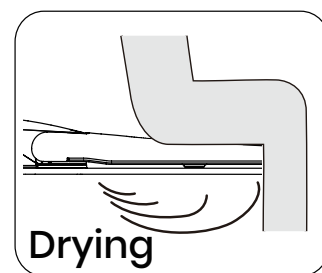

○ ○ ○ ○ ○

Room
temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4

● ● ● ● ●




Level 5

Water volume adjustment

Press “+” or “-” button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted.

Nozzle position adjustment

   Press “” or “” button when it is under function of rear washing or front washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.

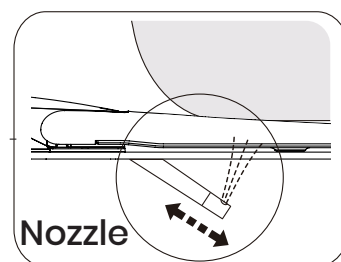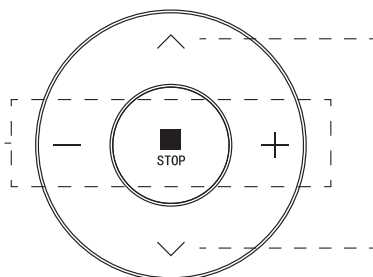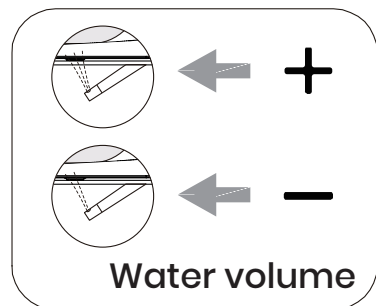

Water temperature adjustment

Short press “” button to adjust the water temperature between 0-5 level. The indicator light is on showing current water temperature level. When the indicator is off, the temperature is at level 0 (room temperature).

○ ○ ○ ○ ○

Room
temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○


Level 4

● ● ● ● ●

Level 5

REMOTE CONTROL INSTRUCTIONS

 Usage Instruction



LIGHT

Night light

Night light adjustment “☀️” Short press “☀️” button to turn on/turn off night light.

Intelligent mode: Long press “☀️” button to enter into intelligent mode (Night light will be on or off depending on the surrounding light.). If the product is on intelligent mode, short press “☀️” button to exit intelligent mode. (Factory setting: intelligent mode)



DESCALE

Descaling

When no one is seated, press “⬆️” button for longer than 3 seconds to drain the water tank. Empty the water tank and pour in 125mL descaling agent. Long press “⬆️” button again to start descaling function and it will stop automatically after 30 minutes. Do not cut off water and electricity during descaling.



NOZZLE CLEANING

Nozzle cleaning

When no one is seated, short press “⚡️” button, the nozzle will automatically stretch out to allow access for cleaning. Press “⬛” button to return the spray wand to its normal position.

Quiet mode

Press and hold the “⬛” button and press the “👤” button to turn on/off quiet mode.

Electronic bidet tank flushing

Press and hold “⬆️” and “⚡️” button simultaneously for longer than 3 seconds to start the flushing by water tank of electronic bidet.

User code

Radio frequency remote control

1. Shut off the power supply of toilet
2. Press and hold “⬛” button, then press “🌊” button, the indicator light will flash.
3. Re-connect the power plug and press “reset” button.
4. The indicator stops flashing and stays on for 2 seconds, indicating that the remote control and the toilet are matched successfully. It beeps once when the self-inspection completes. Then the remote control is ready for use.

Remark:

- The buzzer will “BEEP” once when the user presses one button indicating that the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during nozzle spraying, the wand cannot be retracted, please wait until the power is restored. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.