









## INSTALLATIE VOORSCHRIFT

HORIZON NISDEUR RECHTS  
+ VAST PANEEL MATZWART


+


HORIZON INLOOPDOUCHE  
MATZWART RASTER

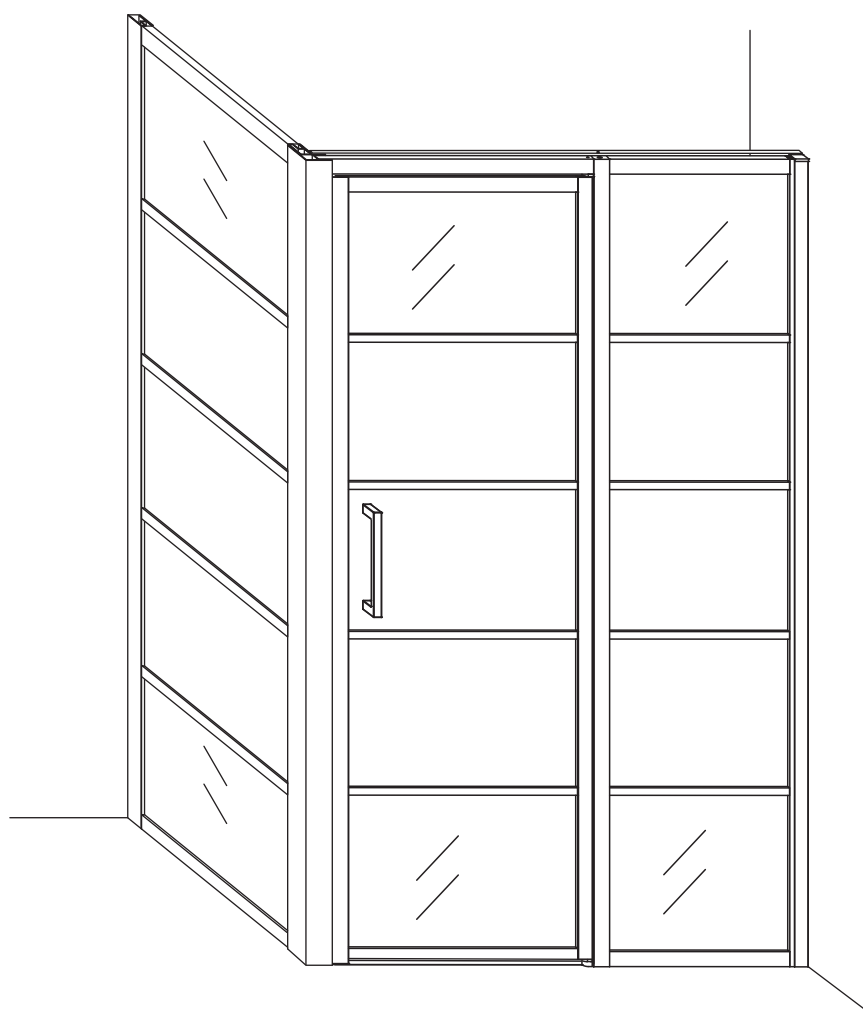

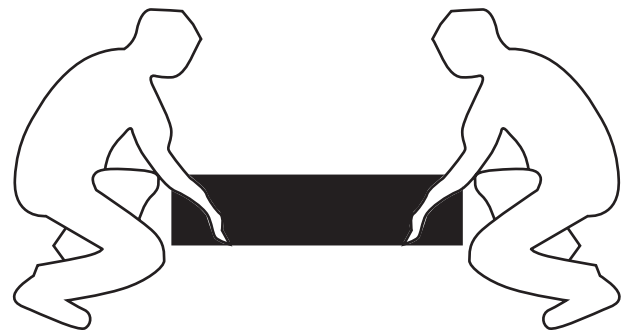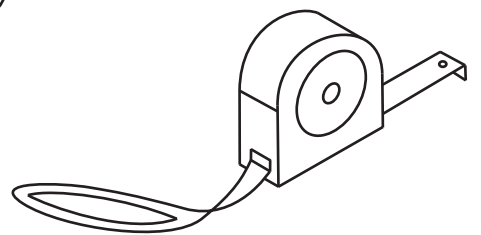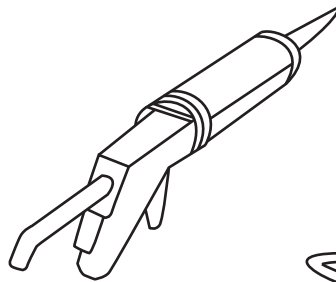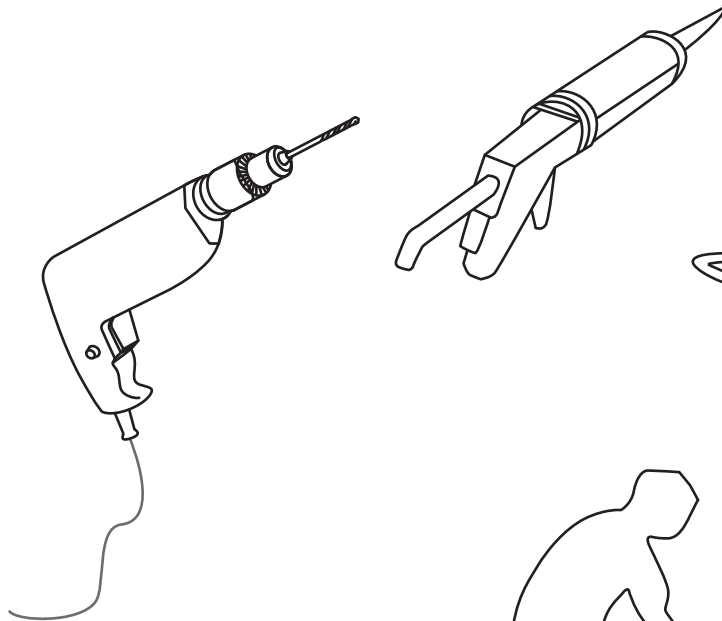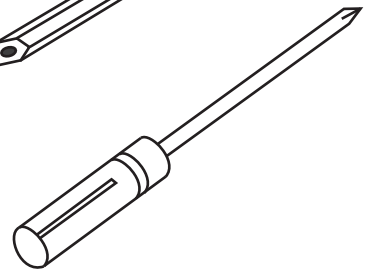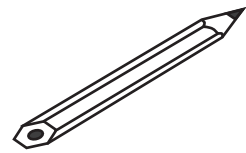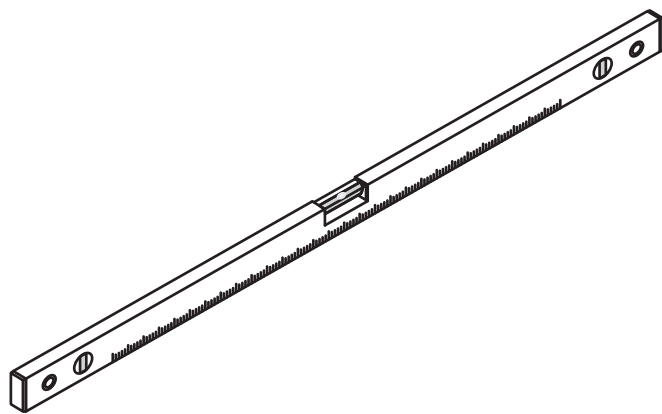


1

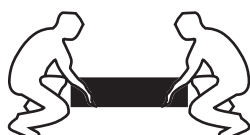

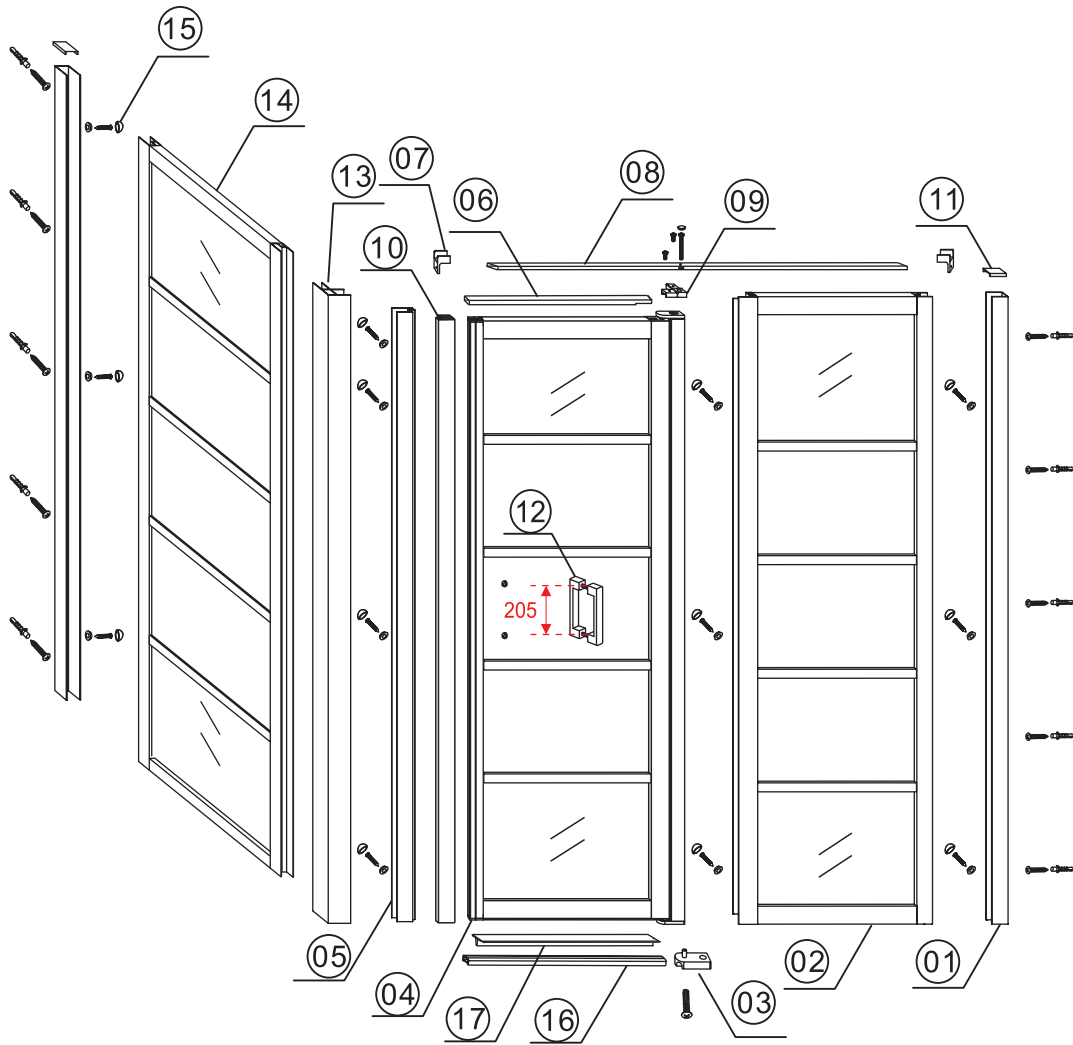


- |      |      |       |      |      |      |
|------|------|-------|------|------|------|
| ① X2 | ② X1 | ③ X1  | ④ X1 | ⑤ X1 | ⑥ X1 |
| ⑦ X2 | ⑧ X1 | ⑨ X1  | ⑩ X1 | ⑪ X2 | ⑫ X1 |
| ⑬ X1 | ⑭ X1 | ⑮ X13 | ⑯ X1 | ⑰ X1 | X1   |
| 4x25 | 4x8  | 4x10  | 4x13 | 4x30 |      |

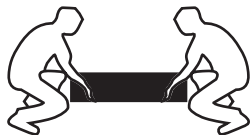









3









- 890(900X800)
- 990(1000X800)
- 1090(1100X800)
- 1190(1200X800)
- 1390(1400X800)
- 890(900X900)
- 990(1000X900)
- 1090(1100X900)
- 1190(1200X900)
- 1390(1400X900)
- 890(900X1000)
- 990(1000X1000)
- 1090(1100X1000)
- 1190(1200X1000)
- 1390(1400X1000)
- 890(900X1100)
- 990(1000X1100)
- 1090(1100X1100)
- 1190(1200X1100)
- 1390(1400X1100)
- 890(900X1200)
- 990(1000X1200)
- 1090(1100X1200)
- 1190(1200X1200)
- 1390(1400X1200)






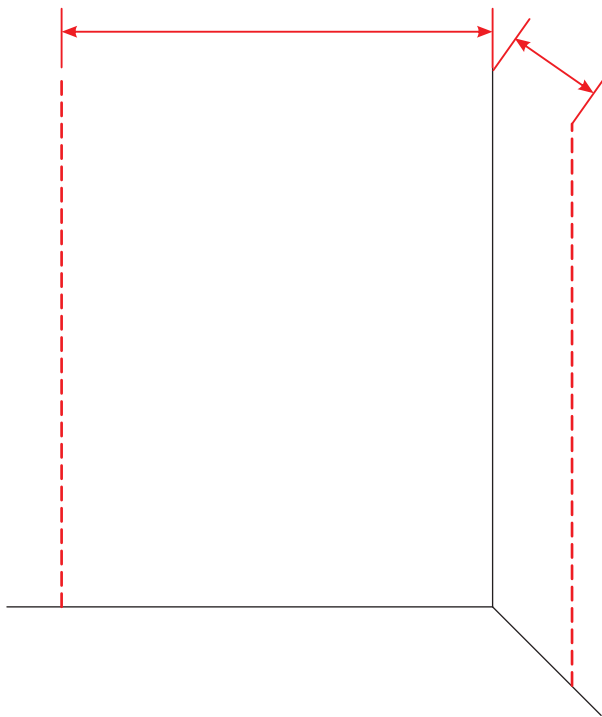


- 790(900X800)
- 790(1000X800)
- 790(1100X800)
- 790(1200X800)
- 790(1400X800)
- 890(900X900)
- 890(1000X900)
- 890(1100X900)
- 890(1200X900)
- 890(1400X900)
- 990(900X1000)
- 990(1000X1000)
- 990(1100X1000)
- 990(1200X1000)
- 990(1400X1000)
- 1090(900X1100)
- 1090(1000X1100)
- 1090(1100X1100)
- 1090(1200X1100)
- 1090(1400X1100)
- 1190(900X1200)
- 1190(1000X1200)
- 1190(1100X1200)
- 1190(1200X1200)
- 1190(1400X1200)













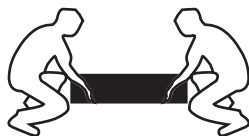
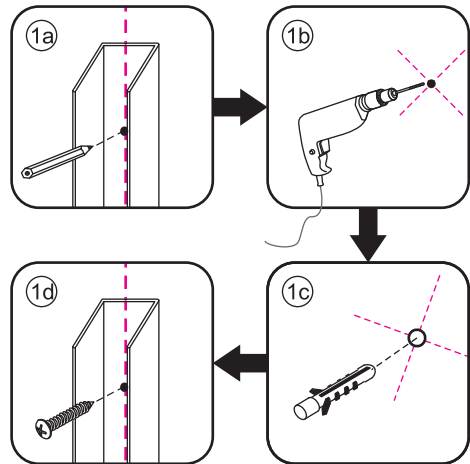
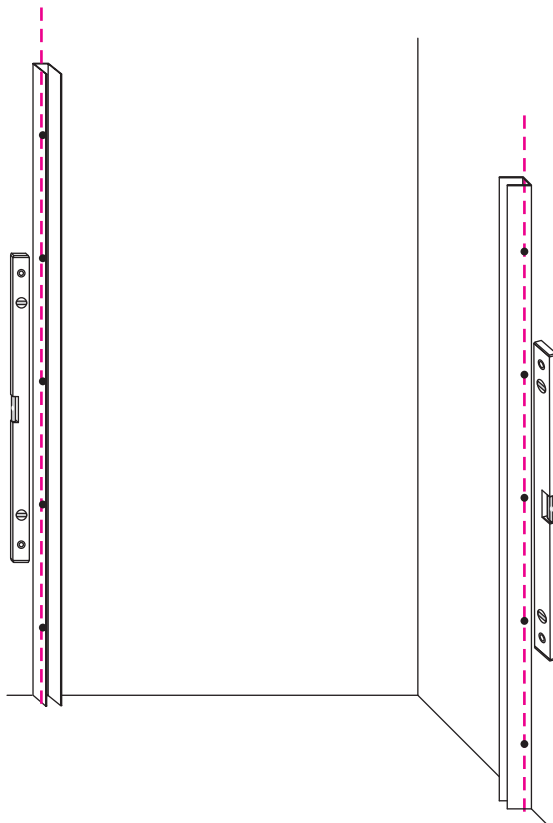


# 5











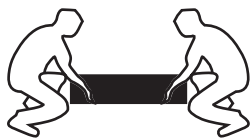
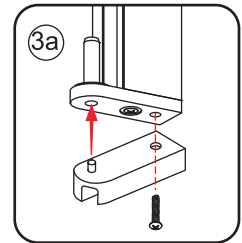
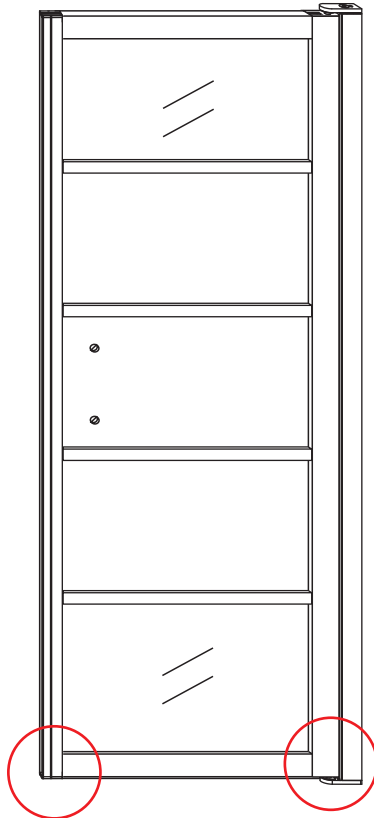
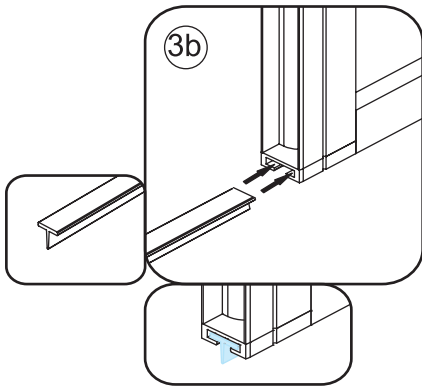
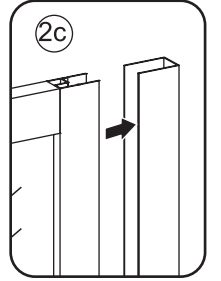
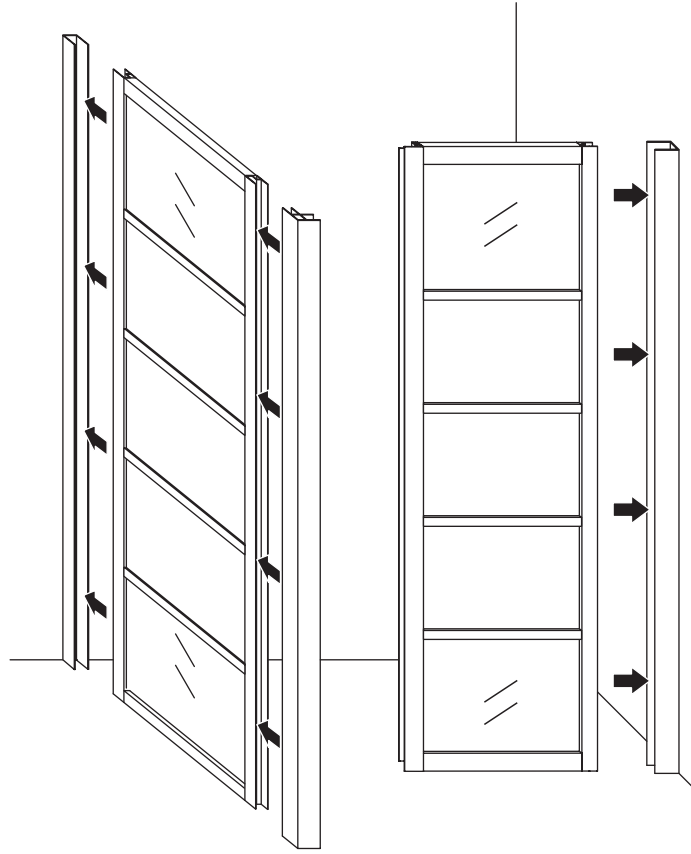
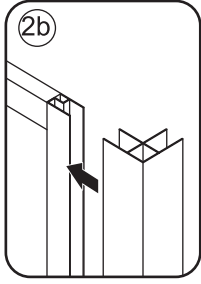
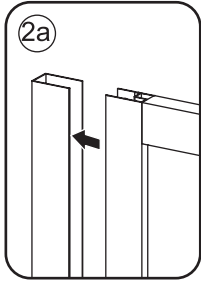


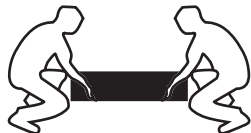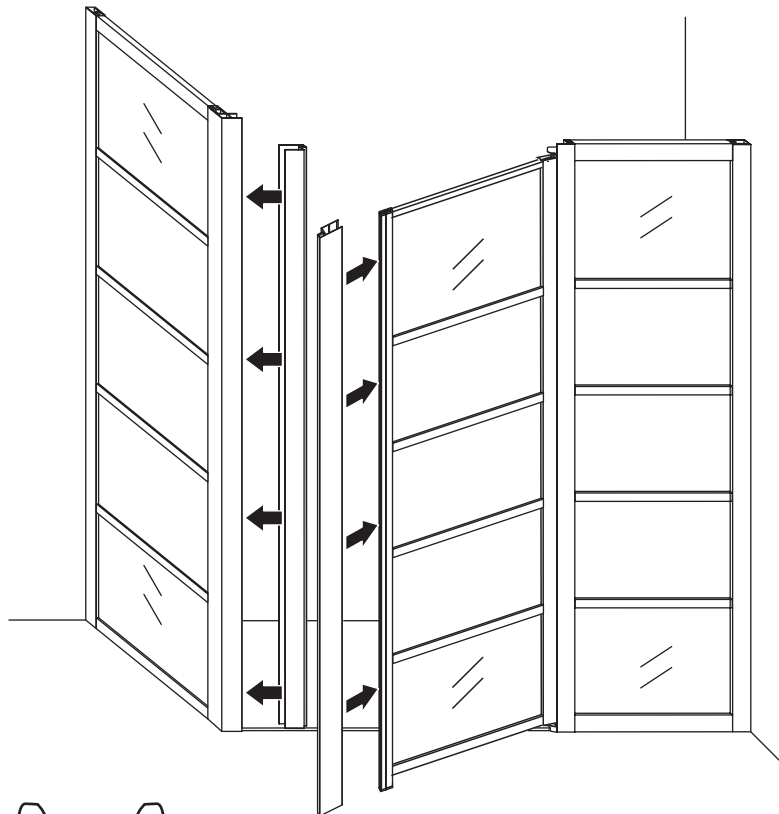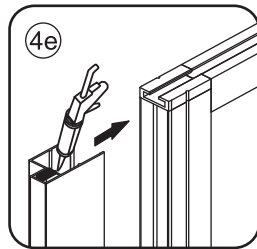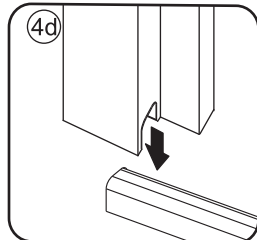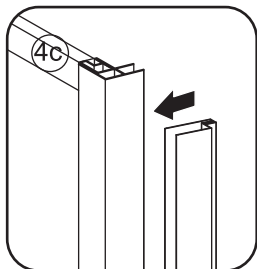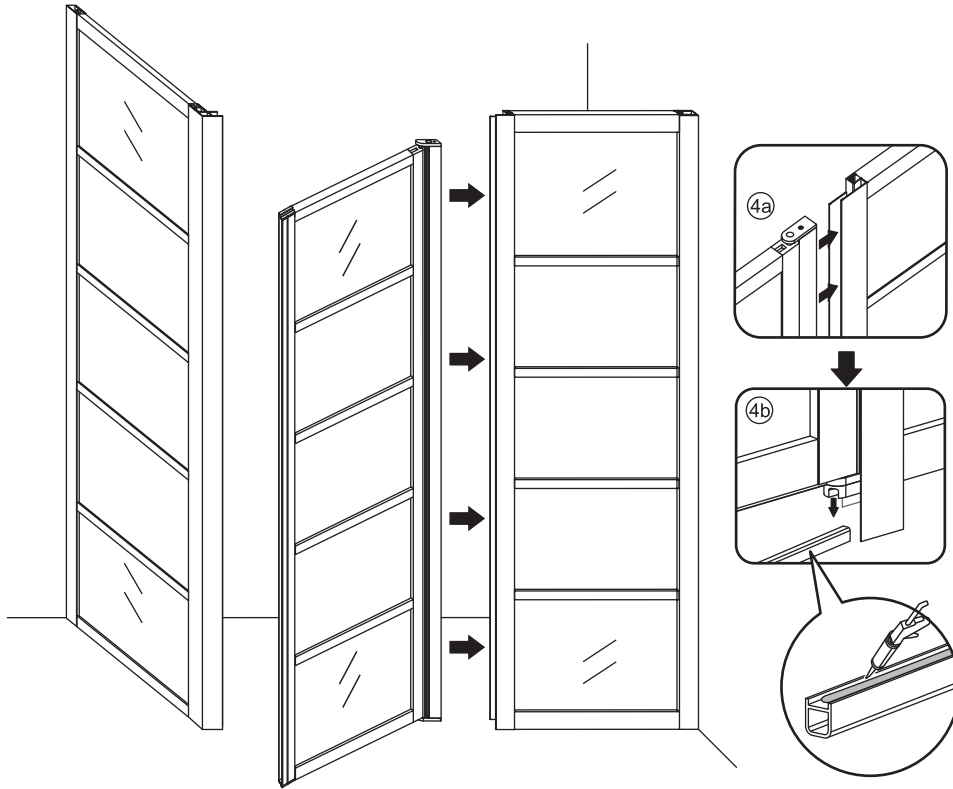


# 7

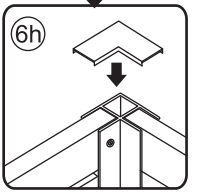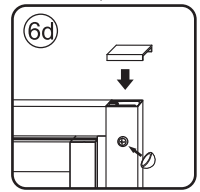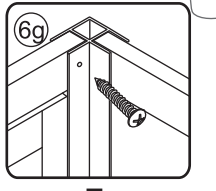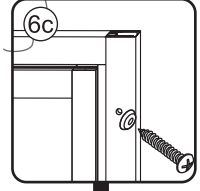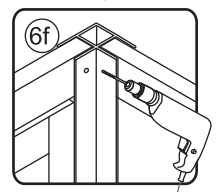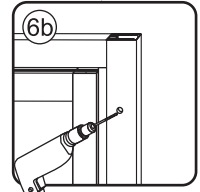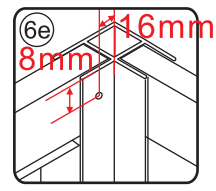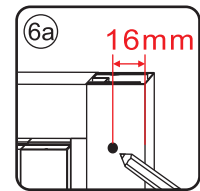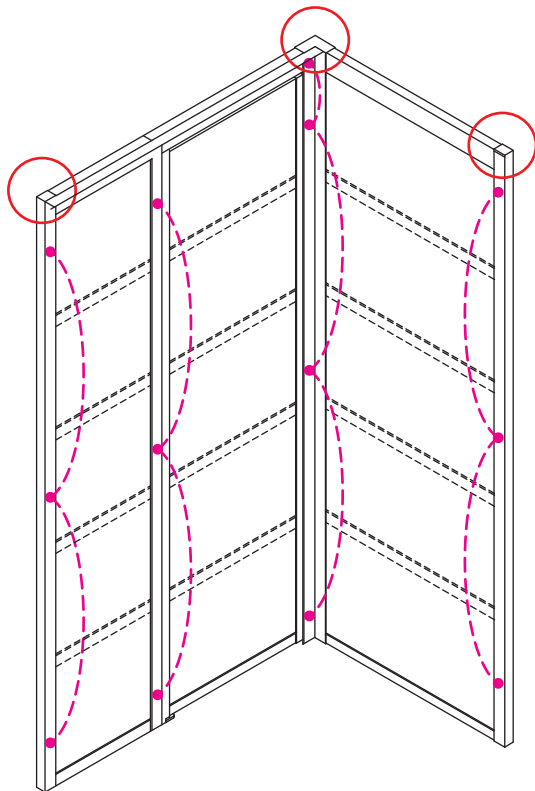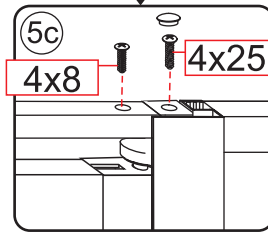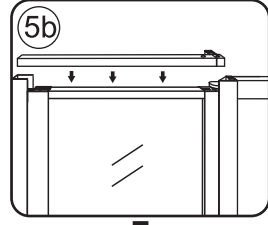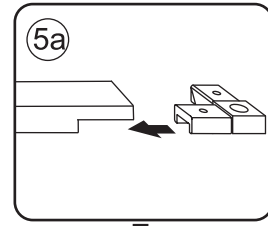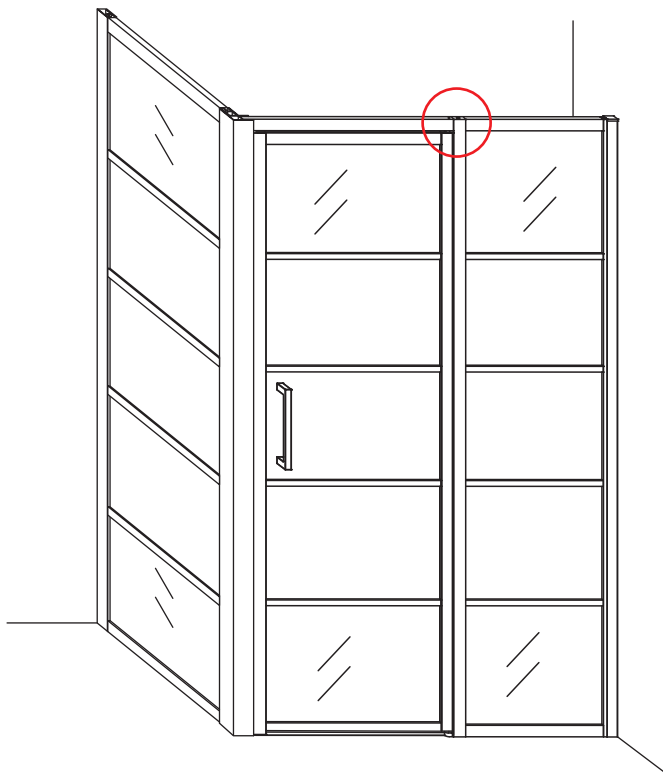



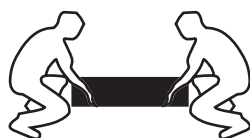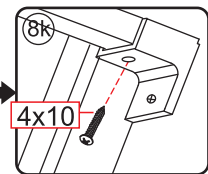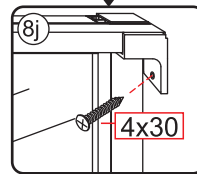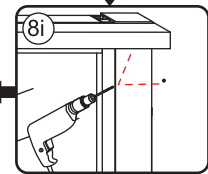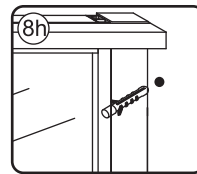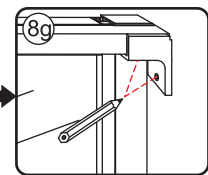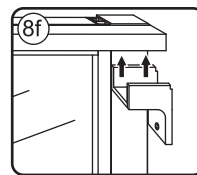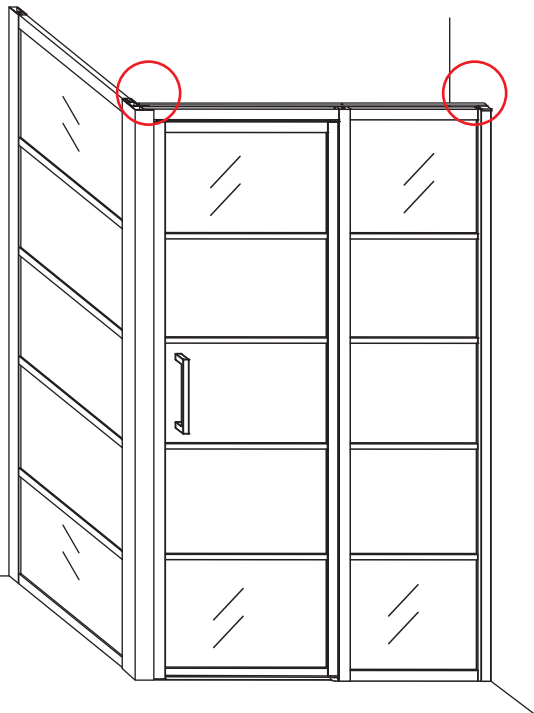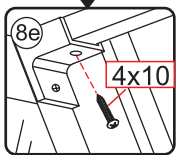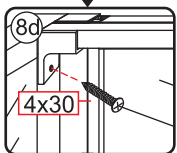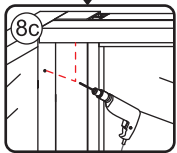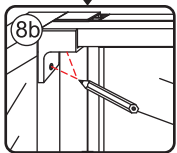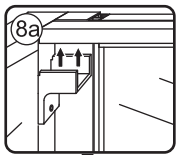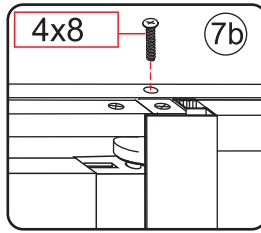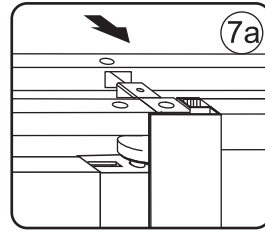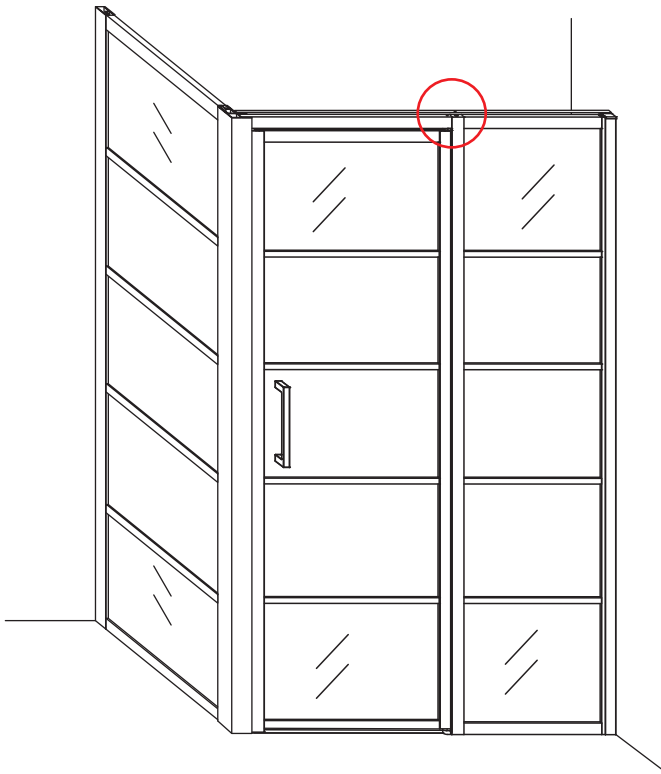

9

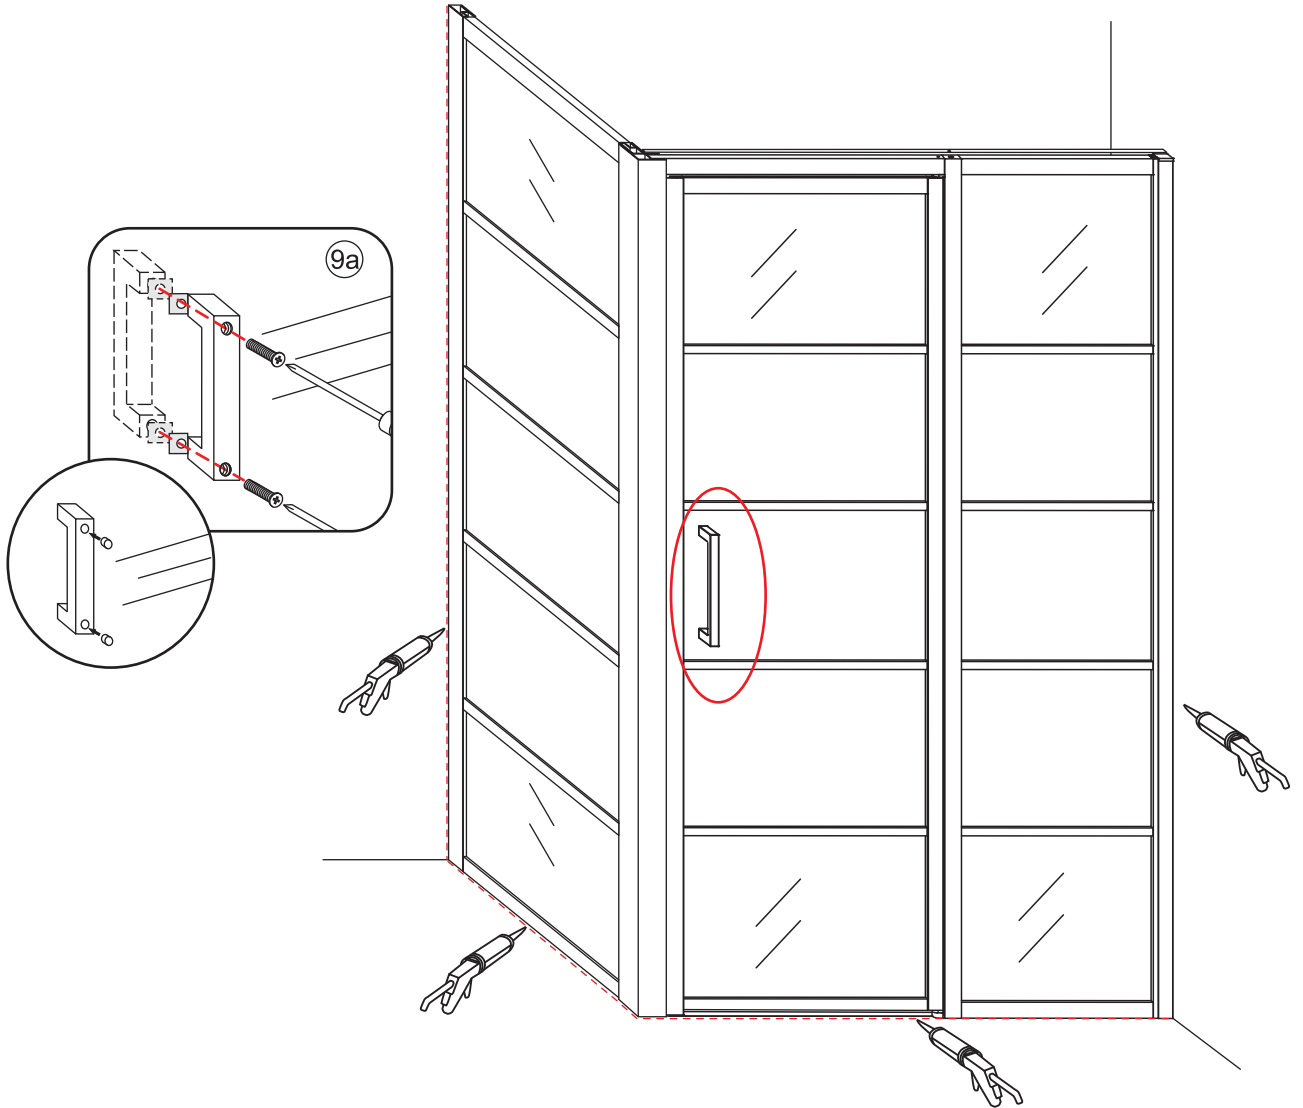

Voorzie alleen de buitenzijde van de cabine van siliconenkit.

