

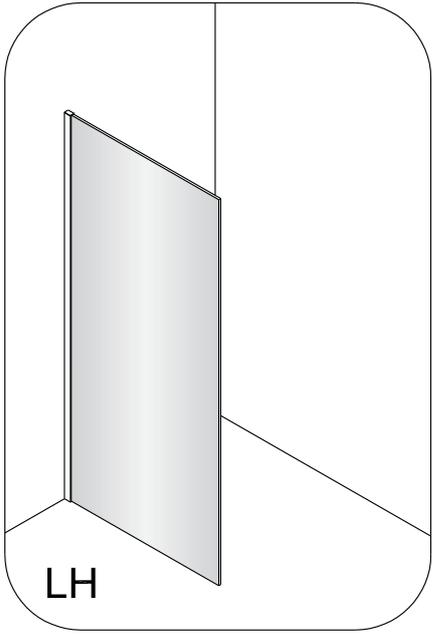
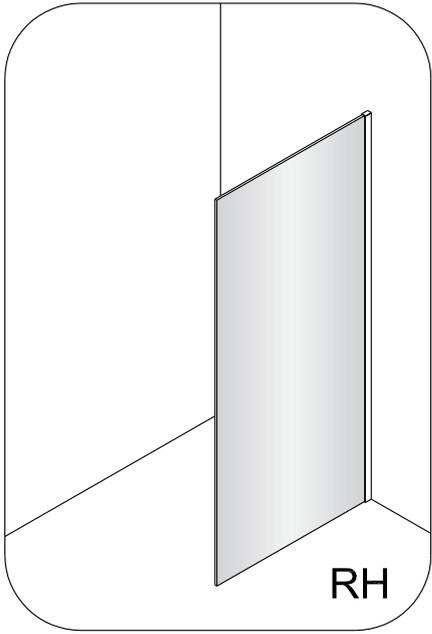
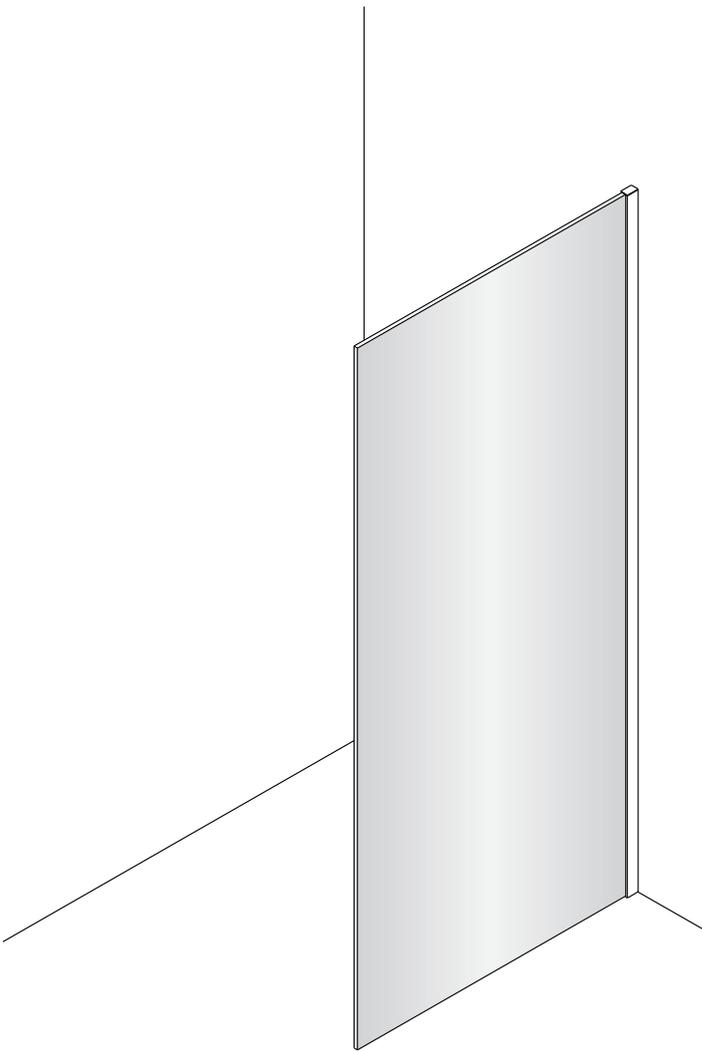
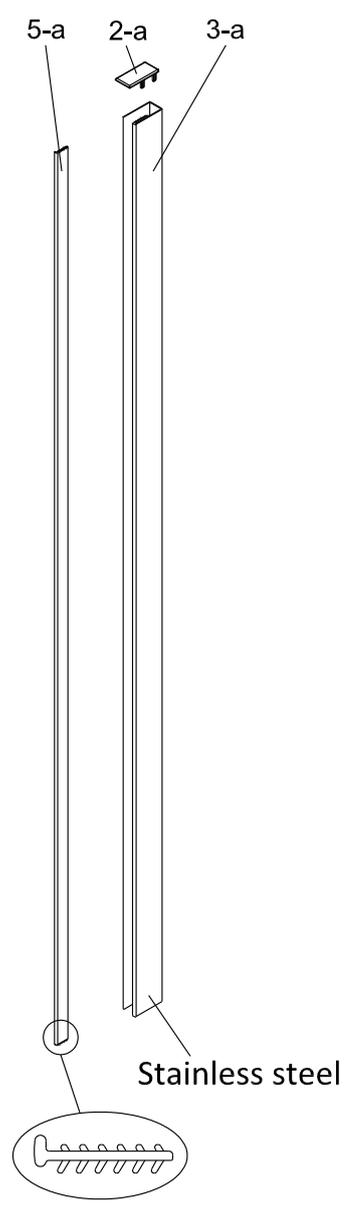
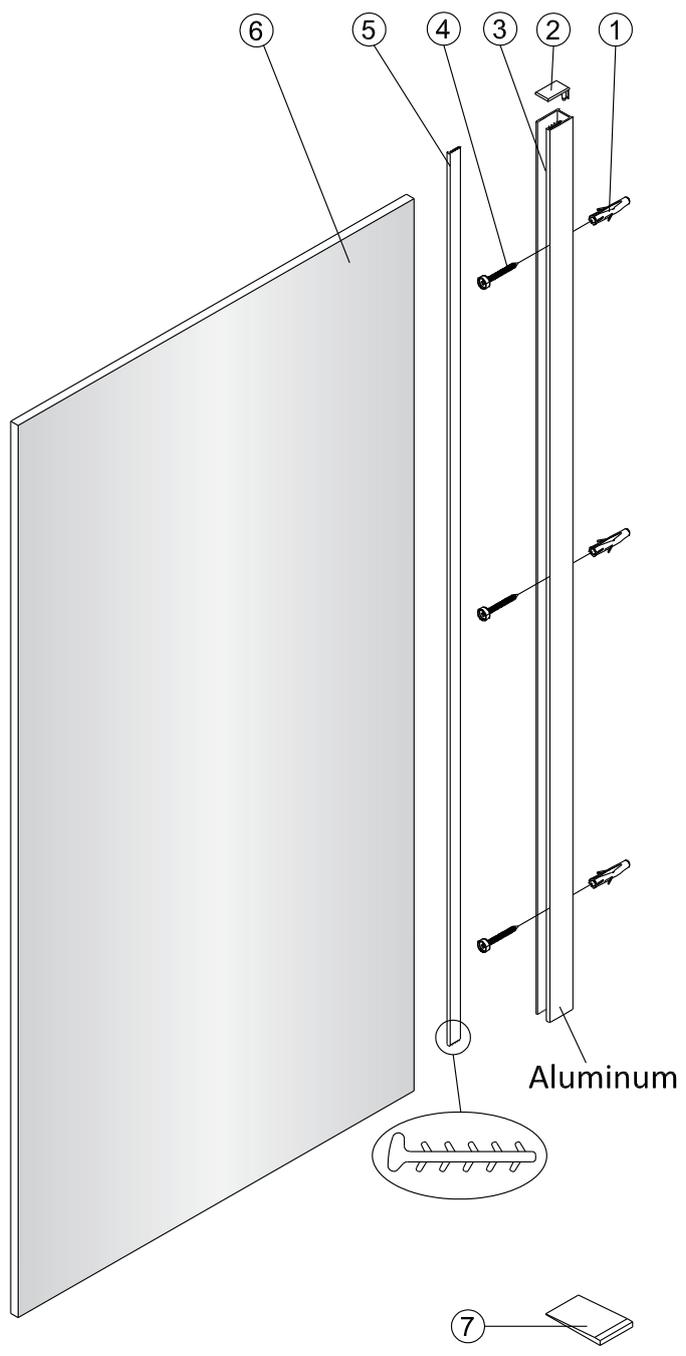



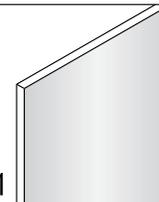





**CAR30X / CAR40X / CAR50X /
CAR6AX / CAR7AX / CAR8AX /
CAR9AX / CAR1AX / CAR2AX
Instruction Manual**







1  x3	2  x1	3  x1	4  ST4x40 x3
5  x1	6  x1	7  x4	

2-a  x1	3-a  x1
5-a  x1	

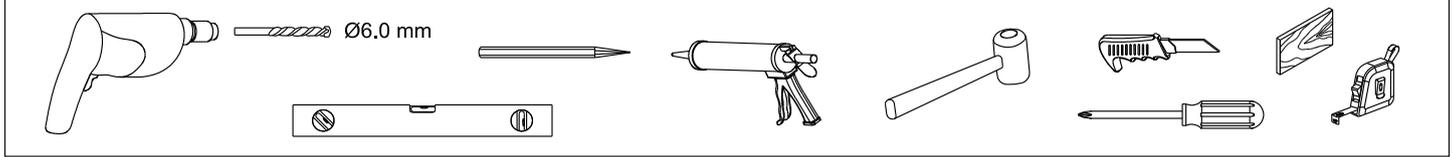


Installation instructions for aluminum profile:

1

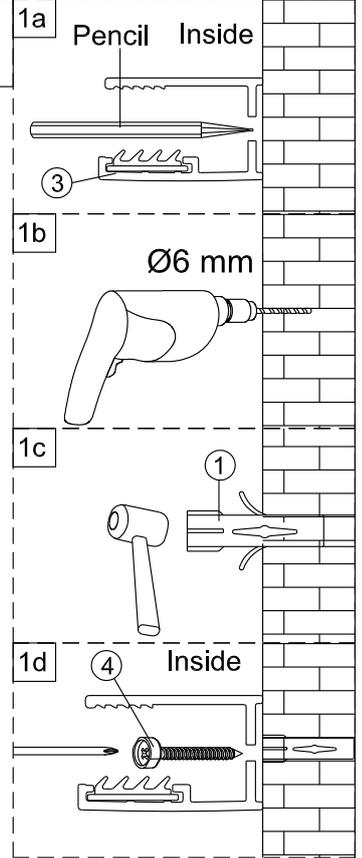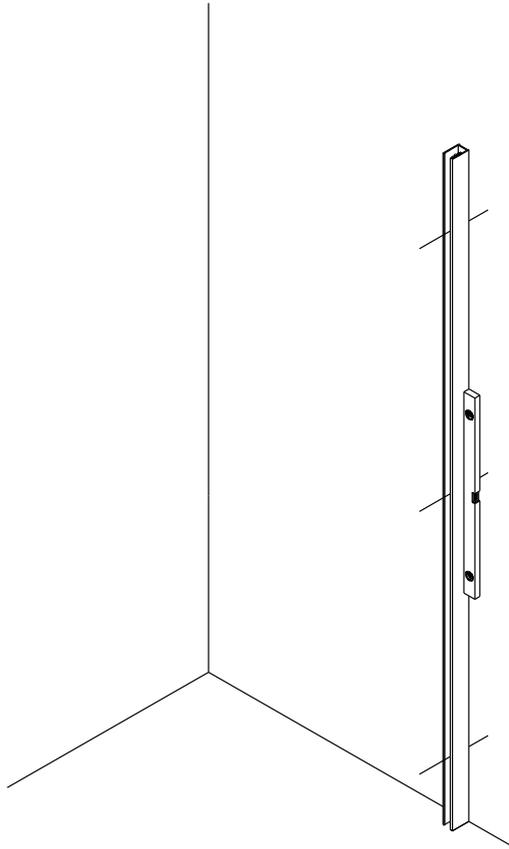

This side with easy clean treatment, please put this side to inside of shower enclosure.


2

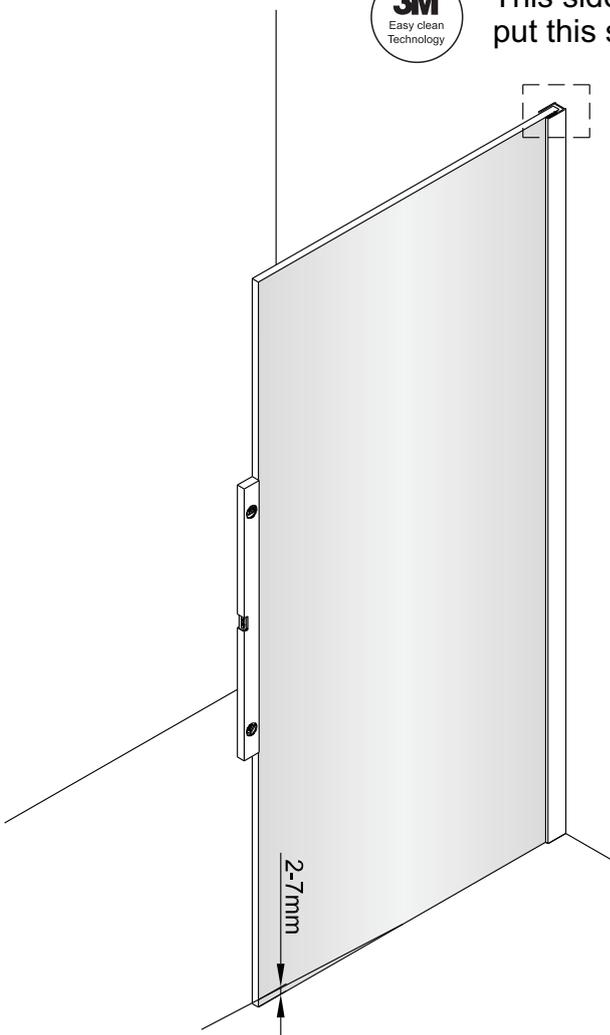


When the bottom fixed door is not in line with the floor or tray edge, the setting wedge 7 will be needed and can pad 2-7mm.


Put silicone on the two wedges and place them to level the fixed door.

Cut the extra part along the bottom edge of fixed door.



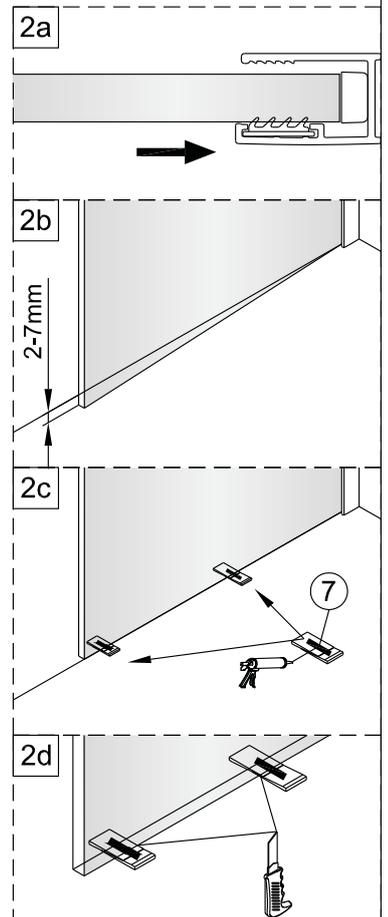


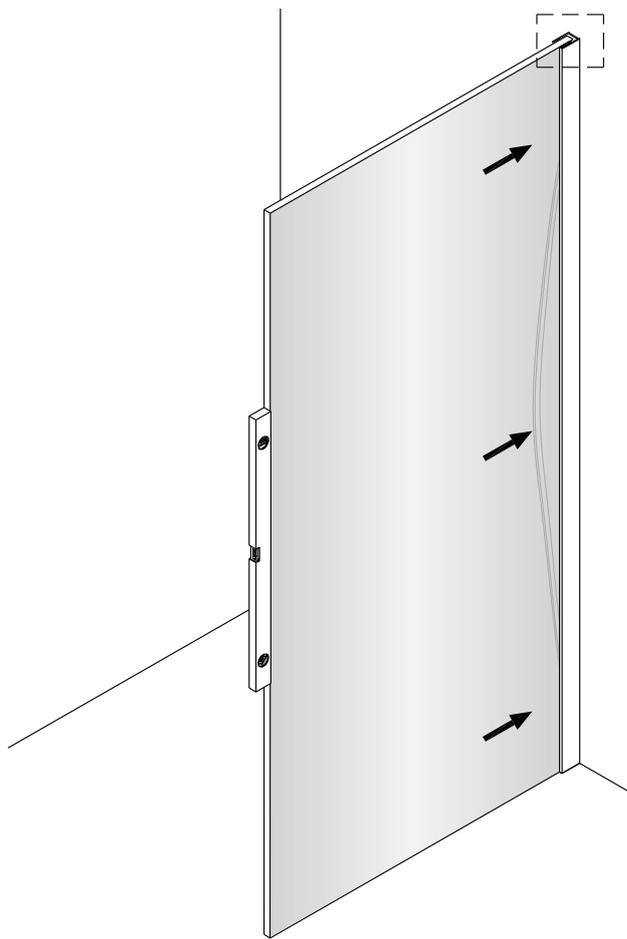

3

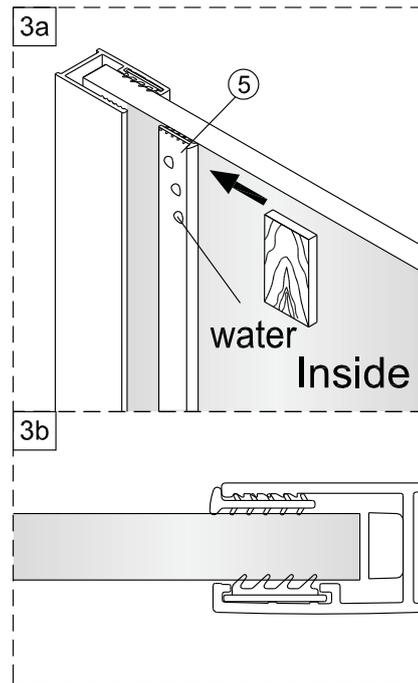


4

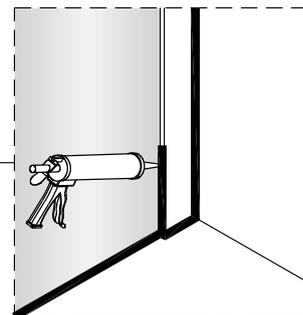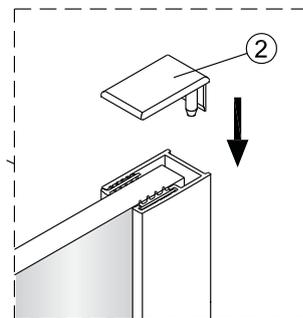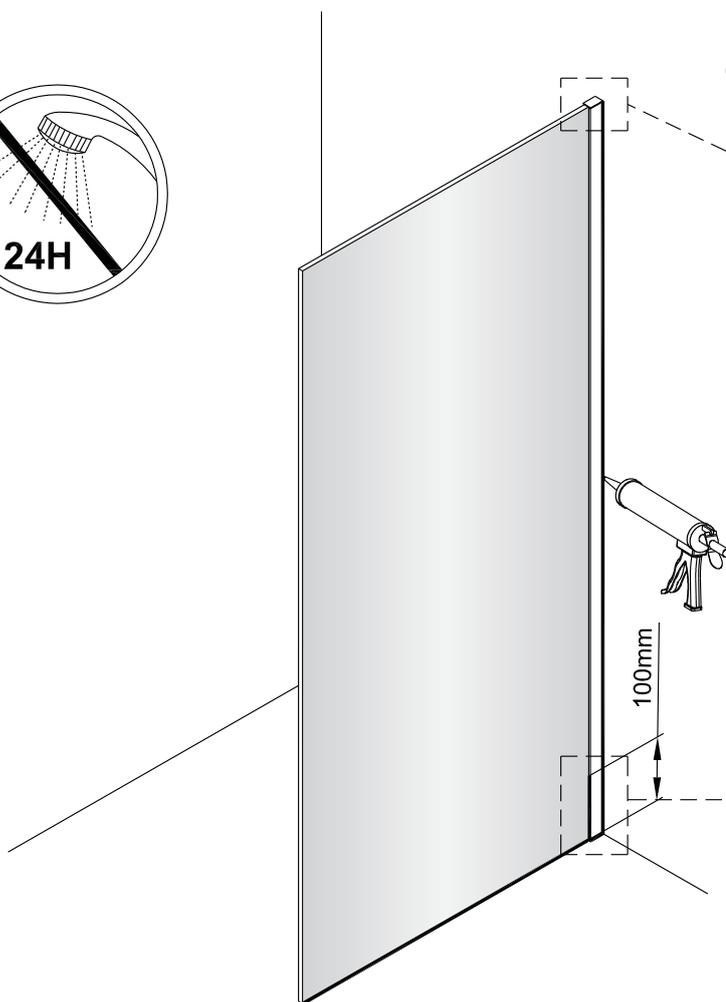


Installation instructions for stainless steel profile:

1

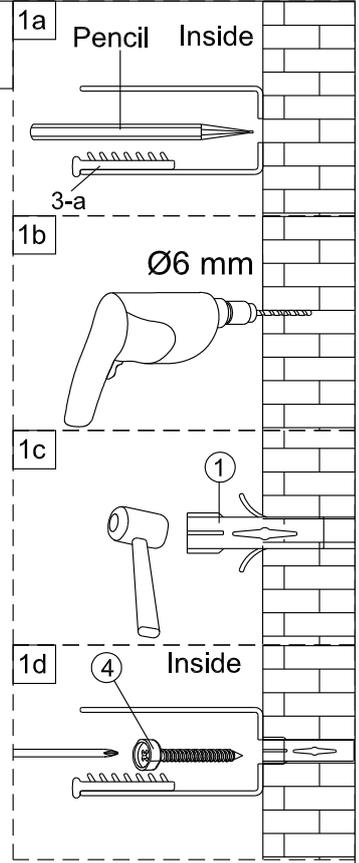

This side with easy clean treatment, please put this side to inside of shower enclosure.


2

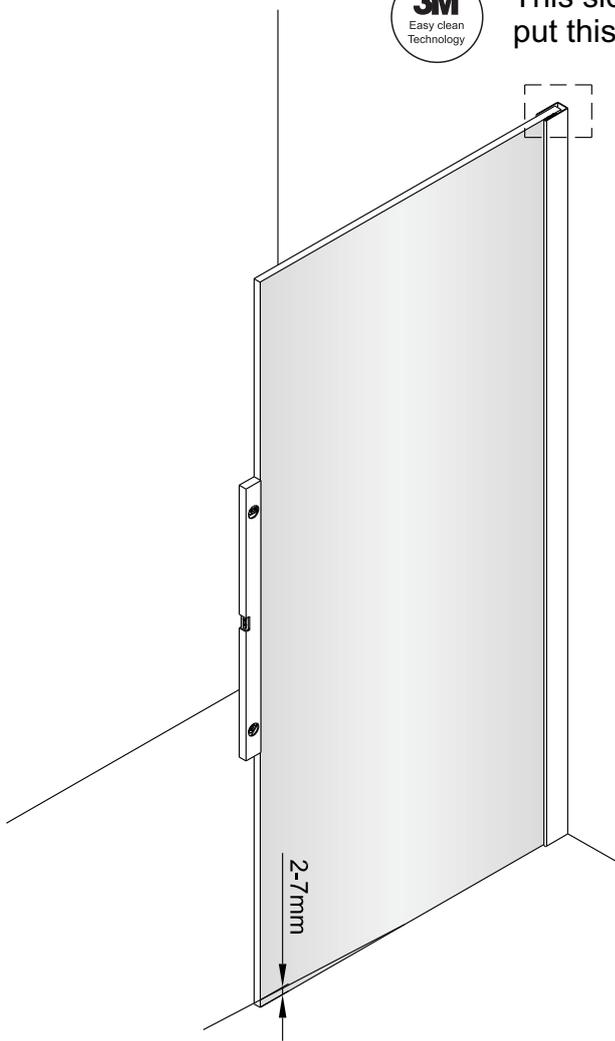


When the bottom fixed door is not in line with the floor or tray edge, the setting wedge 7 will be needed and can pad 2-7mm.


Put silicone on the two wedges and place them to level the fixed door.

Cut the extra part along the bottom edge of fixed door.

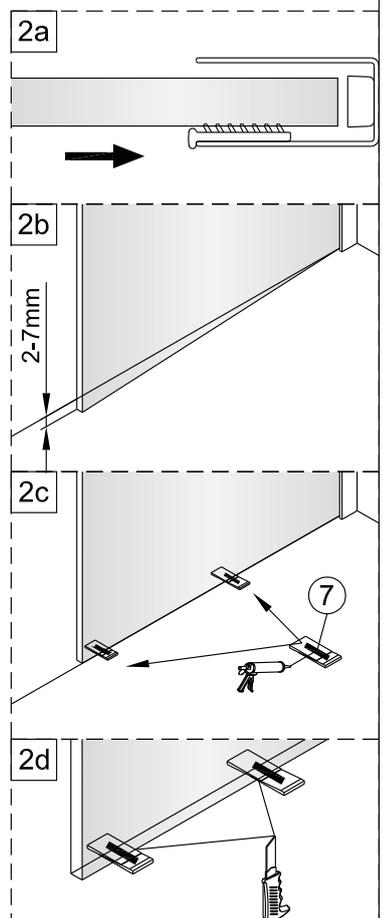


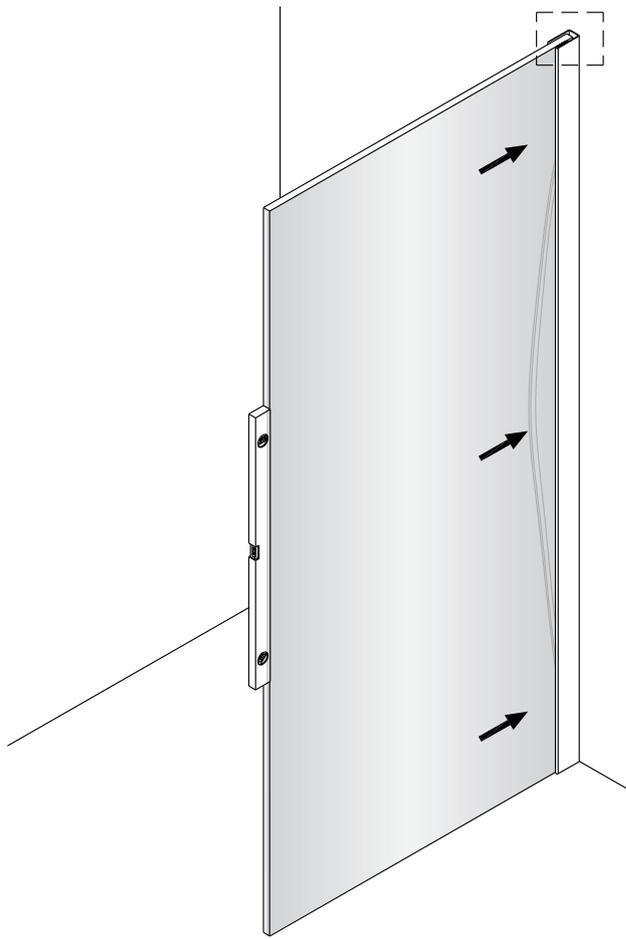

3

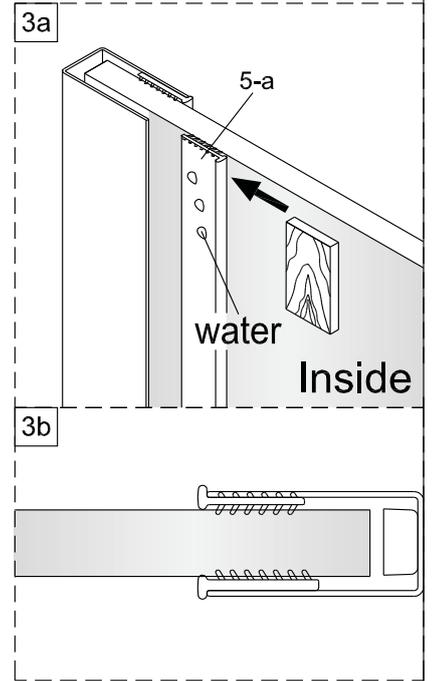

24H

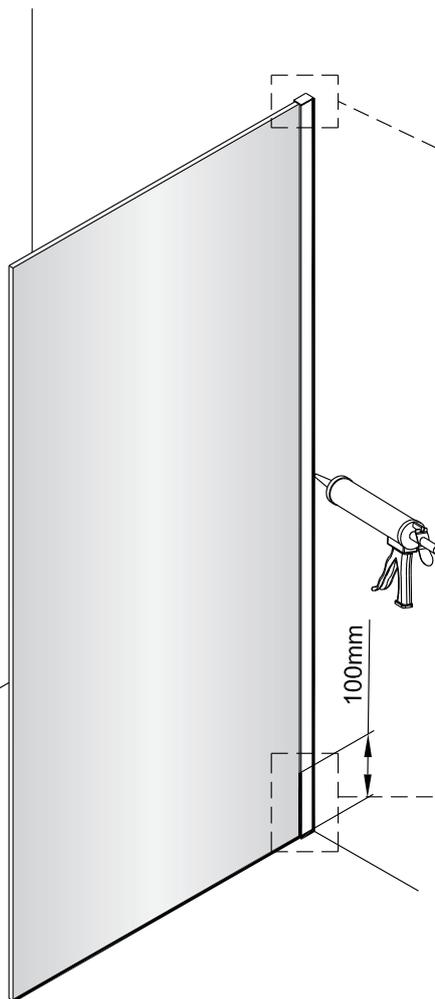

4

